




LAKEDELL AG SOCIETY
Main Hall Floor Plan

W

Please note this map is not to scale

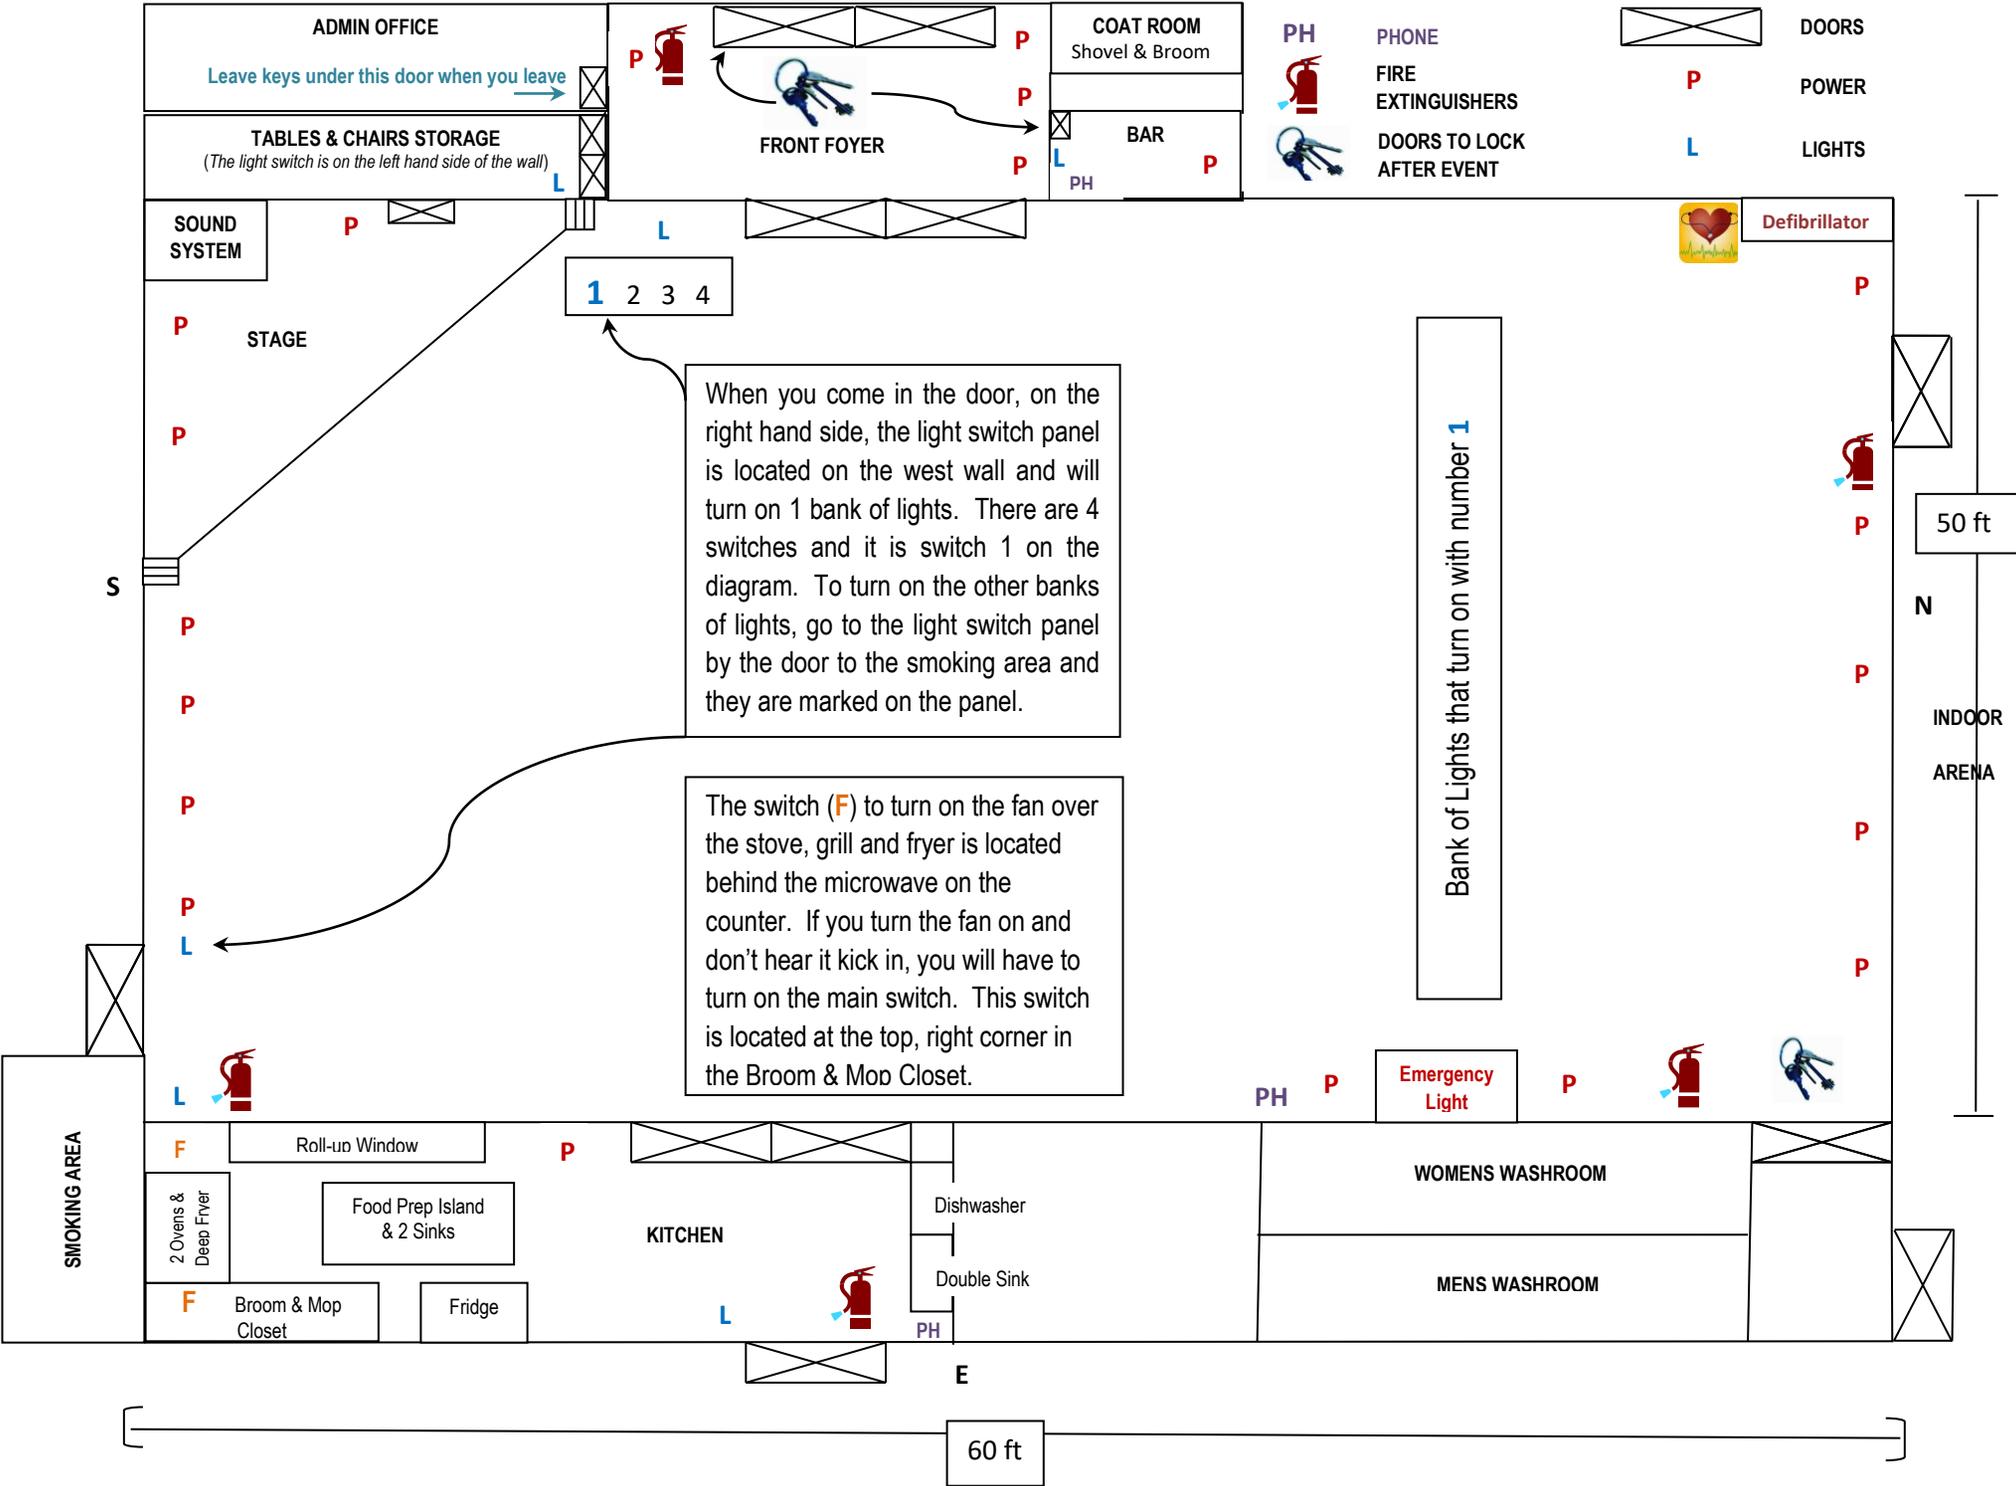

When you come in the door, on the right hand side, the light switch panel is located on the west wall and will turn on 1 bank of lights. There are 4 switches and it is switch 1 on the diagram. To turn on the other banks of lights, go to the light switch panel by the door to the smoking area and they are marked on the panel.

The switch (F) to turn on the fan over the stove, grill and fryer is located behind the microwave on the counter. If you turn the fan on and don't hear it kick in, you will have to turn on the main switch. This switch is located at the top, right corner in the Broom & Mop Closet.

Bank of Lights that turn on with number 1

50 ft

60 ft